

SuperBike Grip Installation

Congratulations on your purchase of a new set of Premium Avon Grips. All of Avon's grips are manufactured In The USA, with the highest quality materials available on the planet, and will provide peak performance for you every day.

This pair of SuperBike grips has multiple fitment options, so please follow Avon's installation instructions completely. Failure to do so may void manufacturers warranty.



Your new grips come with two different throttle cams, labeled A and B (illustration 1). The throttle cam labeled A will fit Suzuki, Ducati, and Yamaha models. The throttle cam labeled B will fit Honda, Kawasaki, and Aprilia models. Identify the throttle cam that will fit your model bike. If this is a replacement job, compare this throttle cam to the cam being removed.

1 Do not use any glue at this time. Place the cam over the throttle sleeve gear, Identification Letter goes on first (illustration 1 & 2). Without attaching any of the throttle wires to the cam, check to see if your bike's throttle housing will close around the new cam, and the grip will operate correctly.




3 ADHESIVE R & D SI 1000 Instant Adhesive

Caution: Skin bonder
Flush eyes, skin,
mouth, with water.
Get Medical Attention.
Keep out of reach
of children. Read MSDS
715 - 832 - 4557
1 gram LM18437

Now that the cam has been tested for fitment inside the throttle housing, it is time to permanently glue the throttle cam to the gear on the grip's throttle sleeve.

Please read warning label (illustration 3) before proceeding. To begin please note that too much glue will not dry properly. A standard drop of glue in several locations is best. Cut open the enclosed glue tube and apply 4 drops of glue to the gear at the flat edge behind the gear (illustration 4).

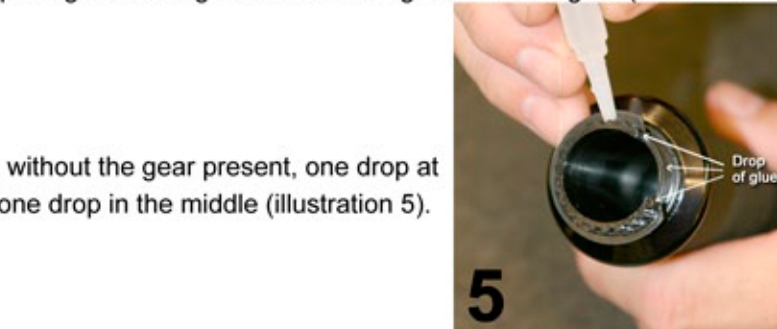


Now add 3 additional drops to the area without the gear present, one drop at each edge, and one drop in the middle (illustration 5).



Place the throttle cam over the throttle gear as practiced earlier, making sure the labeled side A or B goes on first. Press and hold in place for a few minutes.(illustration 6).

Then wipe off all excess glue visible on the surface. Let dry completely for at least 30 minutes. The glued part should be ready to use after 30 minutes, however, overnight drying is always best for full cure. (illustration 7).

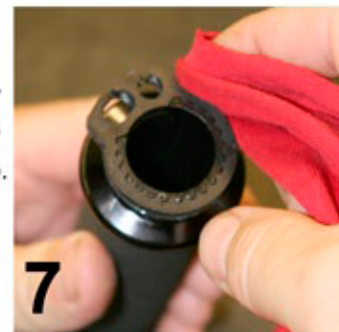

Throttle Sleeve

Install throttle side grip per manufactures specification.

Note: always test throttle response before attempting to ride.




SuperBike Clutch Installation



- (A) 1. Clutch side...Remove old grip. Remove all oil, glues etc. from handlebar (pic. A)



- (B) 2. Remove one side of tape protector, and apply tape to handlebar* (Tape should overhang handlebar by 1/4 inch). Remove second side of tape protector to expose adhesive (pic B) and fold overhanging end inside the handlebar. (pic B1)

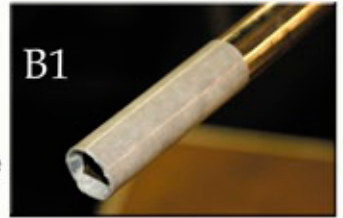

- (C) 3. Pour water inside of grip, and shake grip. Pour out all water from inside of the grip over the entire piece of tape. Rub index finger over entire tape to activate adhesive. Shake out remaining water inside of grip on floor. (pic. C)



- (D) 4. Slide grip over tape. Do not twist grip end cap when installing. Check grip after (2) hours to make sure tape adhesive is dry before riding. (pic. D)

Please do not call the distributor or retailer if you experience a problem with Avon Grips. Please phone the manufacturer direct 800-334-7477.

For more detailed instructions please visit our website www.avongrips.com and look under installation instructions.